

Download Connection RS232C

In case of connecting Main Module 6P Connector and PC 9P Connector

Main Module(6P Male)

1	
2	RD
3	SG
4	
5	
6	SD

PC(9P Female)

1	CD
2	RD
3	SD
4	
5	SG
6	DSR
7	RTS
8	CTS
9	

